


Verona 125




1. SEAT CUSHION

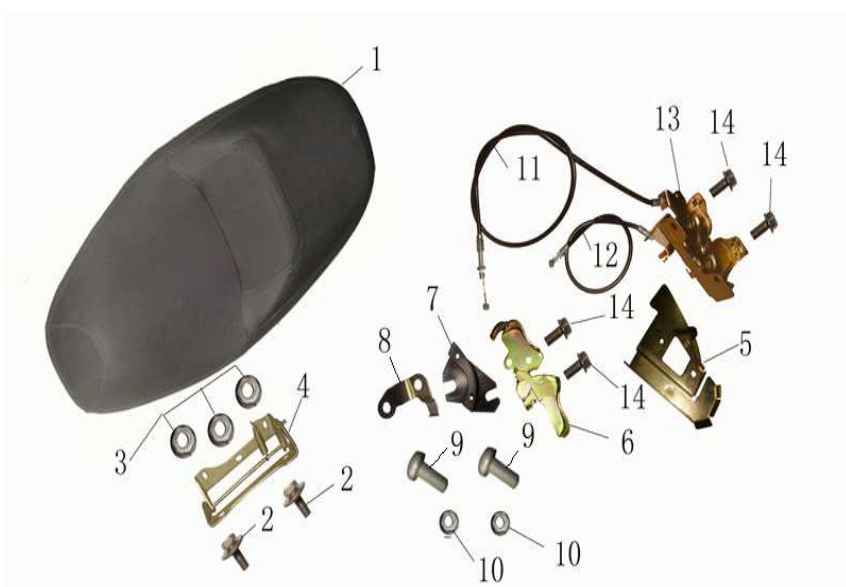


N.	CODE	DESCRIPTION	QTY.
1	125T-B-002001	Seat cushion	1
2	GB5783-86	Bolt flange M6X20	2
3	GB6177-86	Nut flange M6	3
4	125T-B-002002	Seat install board	1
5	125T-B-030004	Protecting cover, seat lock	1
6	125T-B-031001	Seat lock(rear)	1
7	125T-B-031002	Seat lock block	1
8	125T-B-031003	Seat lock block press board	2
9	GB818-85	Screw M5X12	2
10	GB6177-86	Nut flange M5	2
11	125T-B-050404	Seat lock cable(long)	1
12	125T-B-050405	Seat lock cable(short)	1
13	125T-B-030900	Seat lock(front)	1
14	GB5787-86	Bolt flange M6X12	4

2. TOOL BOX

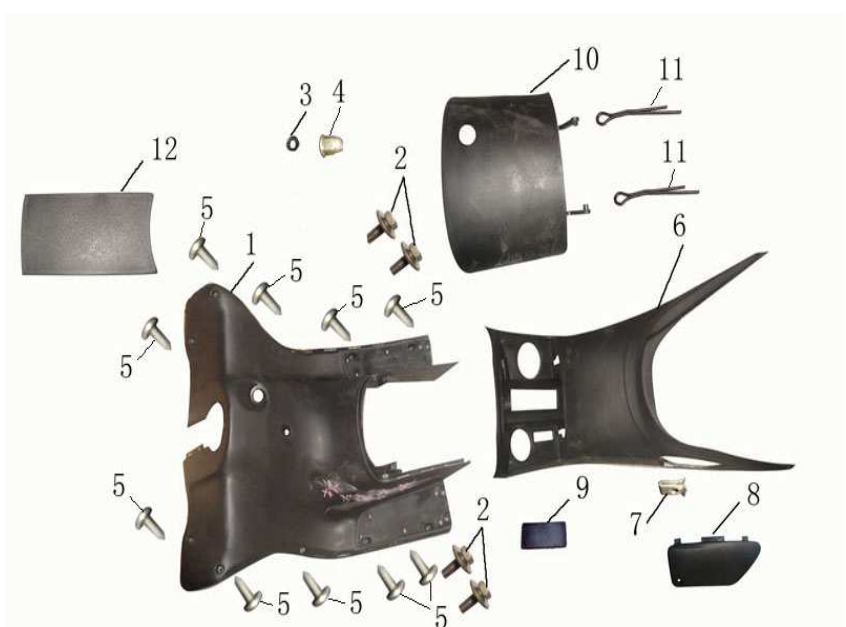

N.	CODE	DESCRIPTION	QTY.
1	125T-B-050501	Tool box	1
2	GB9074.14-88	Screw with washer M6X16	4
3	GB96-85	Big washer 6-140HV	1
4	GB923-88	Cap nut M6	1
5	GB845-86	Screw tapping ST4.8X16	14
6	125T-B-050201	Fr cover, luggage	1
7	ZBT31084-87	Nut spring ST4.2	2
8	125T-B-050203	Small clap,luggage box Fr cover	1
9	125T-B-050503	Number cover	1
10	125T-B-050202.1	Lock cover, fuel luggage	1
11	125T-B-050202.2	Split pinφ2X25	2
12	125T-B-050502	Connecting cover , tool box	1

3. FLOOR PANEL

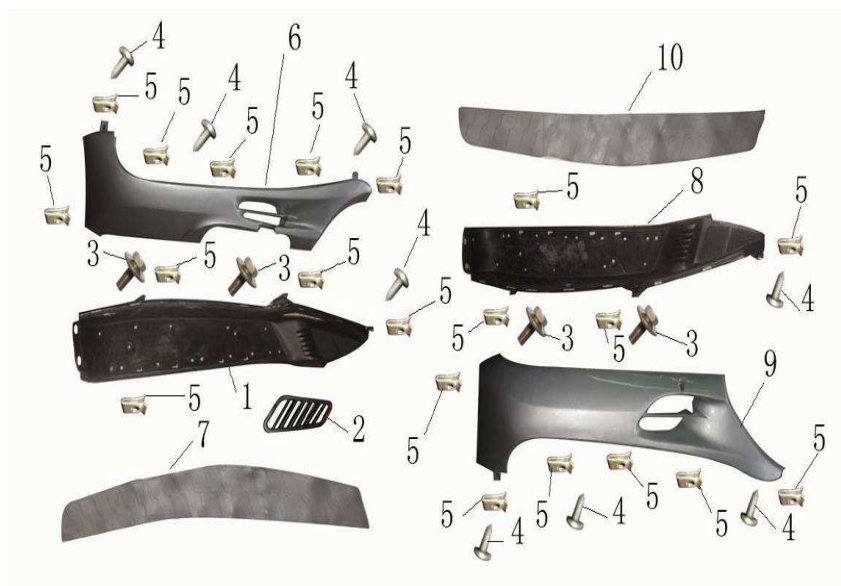


N.	CODE	DESCRIPTION	QTY.
1	125T-B-050006	L foot board	1
2	125T-B-050008	L windage clapboard	1
3	GB9074.14-88	Screw with washer M6X20	4
4	GB845-86	Screw tapping ST4.8X16	8
5	ZBT31084-87	Nut spring ST4.2	20
6	125T-B-050001	L protector	1
7	125T-B-050011	L footskin	1
8	125T-B-050007	R foot board	1
9	125T-B-050002	R protector	1
10	125T-B-050012	R footskin	1

4. LUGGAGE BOX & RR FENDER




N.	CODE	DESCRIPTION	QTY.
1	125T-B-050301	Outer cover,luggage box	1
2	GB9074.14-88	Screw with washer M6X16	4
3	GB845-86	Screw tapping ST4.8X16	5
4	ZBT31084-87	Nut spring ST4.2	9
5	125T-B-050303.1	Battery cover	1
6	125T-B-050303.3	Water-proof	1
7	125T-B-050303.2	Inner cover, luggage box	1
8	125T-B-050302	Luggage box	1
9	125T-B-050304	Rr fender	1
10	GB845-86	Screw tapping ST4.2X13	15
11	GB6170-86	Nut M6	2
12	125T-B-050305	License bracket	1
13	125T-B-050306	Reflector (Special)	1

5. FRONT COVER & FR FENDER

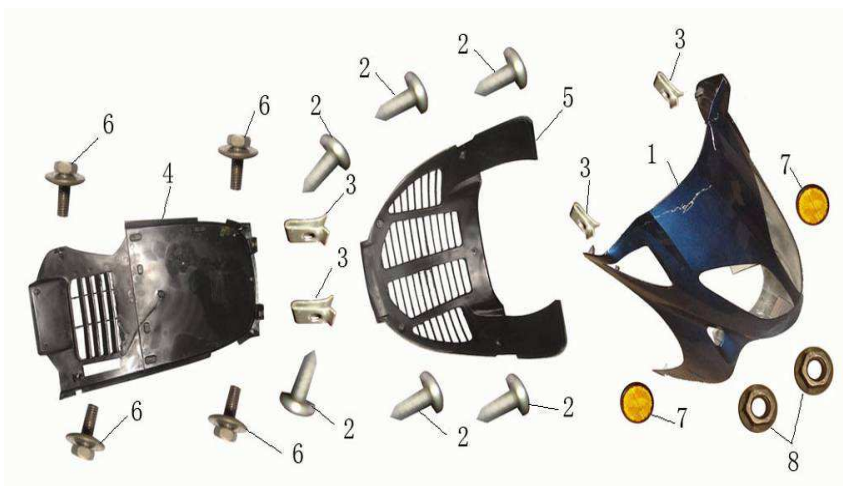

N.	CODE	DESCRIPTION	QTY.
1	125T-B-050101	Front cover	1
2	GB845-86	Screw tapping ST4.8X16	8
3	ZBT31084-87	Nut spring ST4.2	11
4	125T-B-050010	Frame fender	1
5	125T-B-050009	Fr fender Rr	1
6	GB9074.14-88	Screw with washer M6X16	4
7	125T-B-050102	R/L reflector	2
8	GB6177-86	Nut flange M6	2


6. FUEL TANK

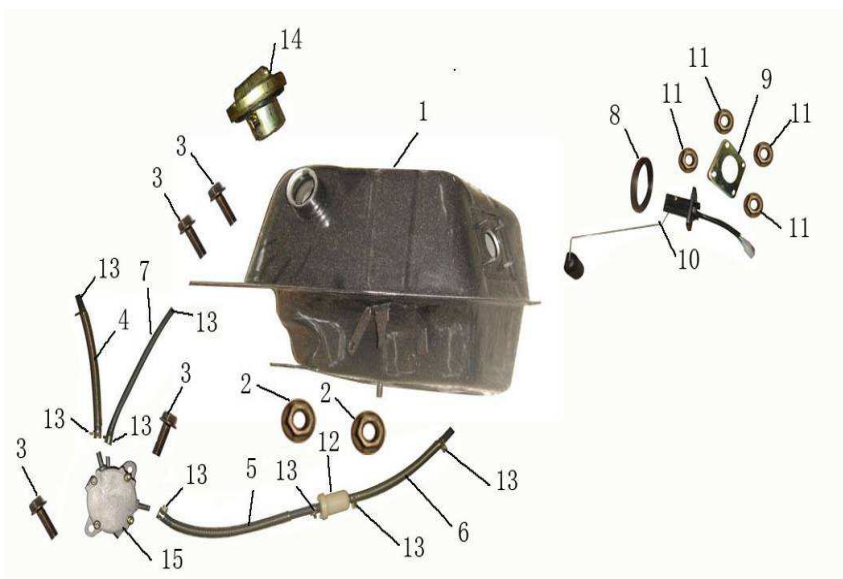

N.	CODE	DESCRIPTION	QTY.
1	125T-B-060100	Fuel tank	1
2	GB6177-86	Nut flange M8	2
3	GB5787-86	Blot flange M6X20	4
4	125T-B-060003.1	Oil pipe A	1
5	125T-B-060003.2	Oil pipe B	1
6	125T-B-060003.3	Oil pipe C	1
7	125T-B-060004	Vacuum tube	1
8	125T-B-060002	Retainer fuel Sealed ring	1
9	125T-B-060001	Retainer fuel unit	1
10	125T-B-060200	Fuel sensor	1
11	GB6177-86	Nut flange M5	4
12	125T-B-060400	Fuel filter	1
13	125T-B-060005	Oil pipe spring	8
14	125T-B-060500	Oil box cover combination	1
15	125T-B-060300	Fuel pump	1


7. L/R BODY SIDE COVER

N.	CODE	DESCRIPTION	QTY.
1	125T-B-050401	R body side cover	1
2	GB845-86	Screw tapping ST4.8X16	6
3	ZBT31084-87	Nut spring ST4.2	2
4	125T-B-050402	L body side cover	1

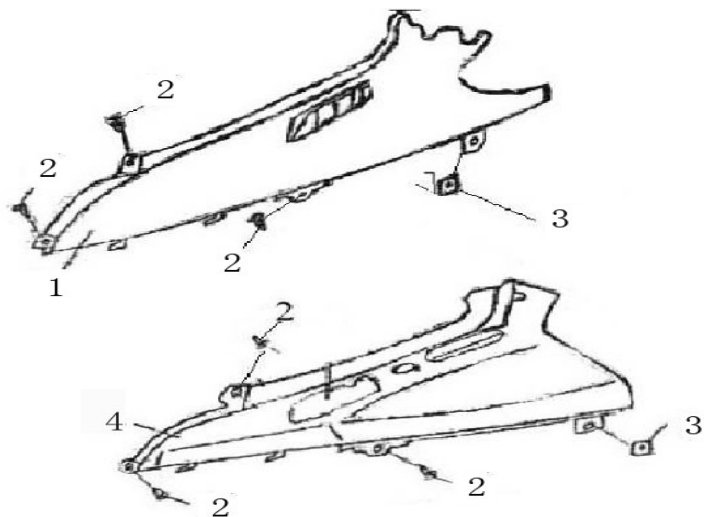


8. L/R MOULDING & RR MOULDING

N.	CODE	DESCRIPTION	QTY.
1	125T-B-050003	L rear moulding	1
2	125T-B-050004	R rear moulding	1
3	125T-B-050005	Rr moulding	1
4	GB845-86	Screw tapping ST4.8X16	7
5	ZBT31084-87	Nut spring ST4.2	4

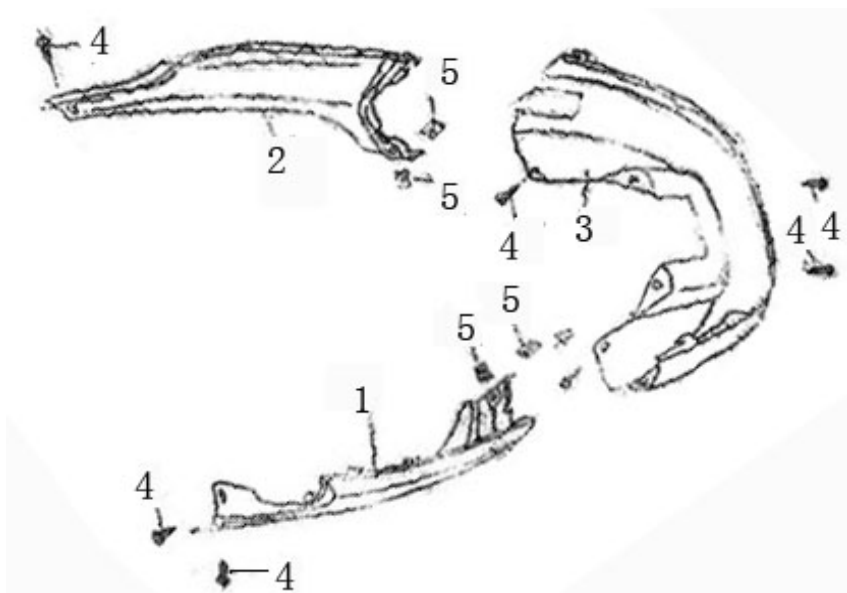

9. HEADLIGHT & R/L DIRECTION

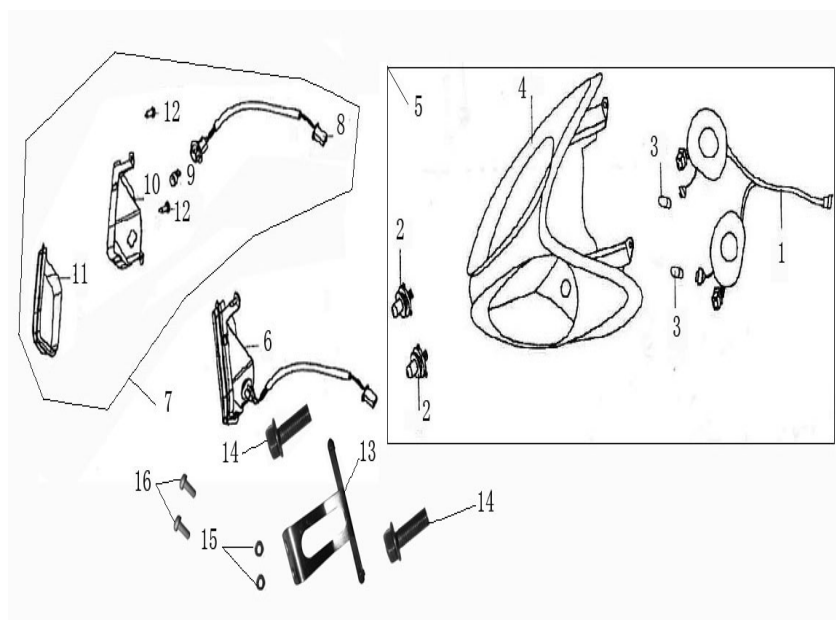

N.	CODE	DESCRIPTION	QTY.
1	125T-B-050103.1	Headlight holder	1
2	GB15766.1-1995	Headlight bulb12V 18W	2
3	GB/T15766.3-1995	Sideleght bulb 12V 3W	2
4	125T-B-050103.2	Headlight cover comp	1
5	125T-B-050103	Headlight	1
6	125T-B-050105	Winker cop L, Fr	1
7	125T-B-050106	Winker cop R, Fr	1
8	125T-B-050106.1	Light Holder	1
9	GB15776.1-1995	Bulb 12V 5W	1
10	125T-B-050106.2	Bulb Bowel	1
11	125T-B-050106.3	Bulb case	1
12	GB845-85	Tapping screw ST4.2X16	2
13	125T-B-050104	Headlight bracket	1
14	GB5787-86	Blot flange M6X12	2
15	GB96-85	Big washer 6-140HV	1
16	GB818-85	Screw M6X12	2


10. TAIL LIGHT ASSEMBLY



N.	CODE	DESCRIPTION	QTY.
1	125T-B-050307	Tail light assy.	1
2	GB9074.14-88	Screw with washer M6X16	5
3	GB96-85	Big washer 6-140HV	4
4	GB845-86	Screw tapping ST4.8X16	3
5	125T-B-050308	Taillight connection board	2
6	ZBT31084-87	Nut spring ST4.2	2


11. REAR RACK & REAR GRIP

N.	CODE	DESCRIPTION	QTY.
1	125T-B-003004	Outer cover,Luggage	1
2	125T-B-003001	Left rear grip	1
3	125T-B-003002	Right rear grip	1
4	125T-B-003003	Rear rack	1
5	125T-B-030300	Buacket,tail light	1
6	GB5787-86	Blot flange M8X35	10
7	GB5787-86	Blot flange M8X40	2
8	125T-B-050403	Rr body side cover	1
9	GB5787-86	Blot flange M6X12	2
10	125T-B-003005	Rr backrest	1
11	125T-B-003007	Rear hual hole	6
12	125T-B-003006	Rear goods bush	2
13	GB5787-86	Blot flange M10X50	4

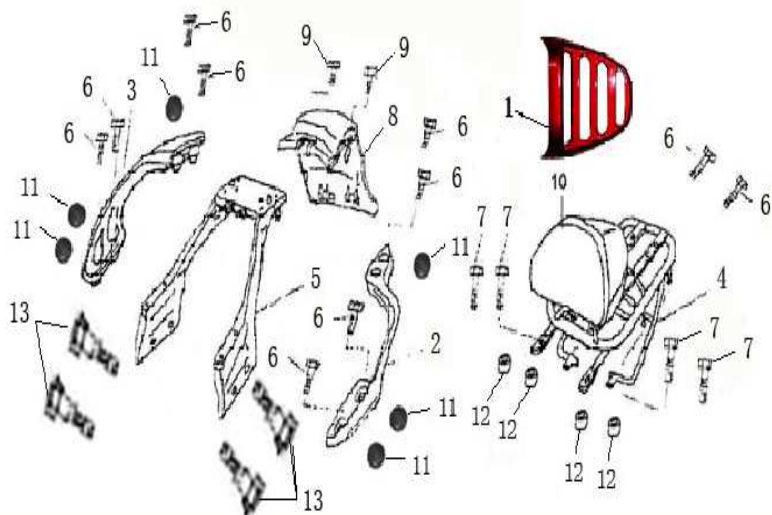

12. MAIN CABLE

N.	CODE	DESCRIPTION	QTY.
1	125T-B-070700	Wire harness, sub	1
2	125T-B-070700.1	Instrument light A 12V/1.7W	3
3	125T-B-070700.2	Instrument light B 12V/1.7W	3
4	125T-B-090010	Wrap	1
5	125T-B-070200	Battery YTX9BS	1
6	125T-B-070004	Anode cable	1
7	125T-B-070003	Cathode cable	1
8	125T-B-030001	Seat lock	1
9	125T-B-070100	Main cable	1
10	125T-B-070600	Starting comp Relay	1
11	GB5787-86	Bolt flange M6X20	6
12	125T-B-070002	Rectifier	1
13	125T-B-070500	Horn	1
14	125T-B-070400	C.D.I	1
15	125T-B-070300	High tension ignition coil	1
16	125T-B-070001	Flasher	1
17	125T-B-070005	Resistance	1
18	125T-B-070006	Carburetor controller	1

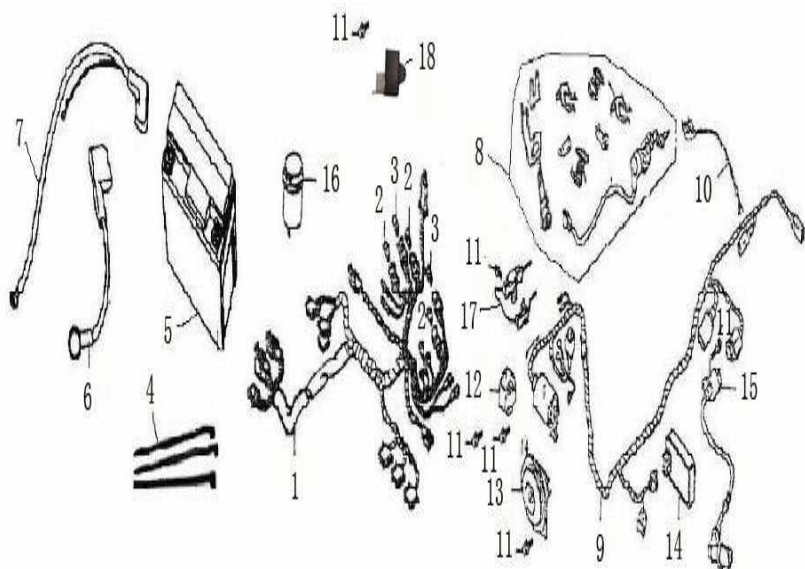

13. FRONT WHEEL




N.	CODE	DESCRIPTION	QTY.
1	125T-B-010001	Fr wheel Axle $\varnothing 12 \times 245$	1
2	125T-B-010002	Fr wheel bush	1
3	125T-B-010203	Vacual tire 110/90-12	1
4	125T-B-010201.1	Dust seal	1
5	GB276-64	Bearing 6201	2
6	125T-B-010201.2	Fr wheel axle, collar	1
7	125T-B-010201.3	Front-wheel hub	1
8	125T-B-010201	Fr wheel panel MT2.75X12	1
9	125T-B-010202	Valve cock	1
10	125T-B-010205	Dis brake srew , Fr	6
11	125T-B-010204	Fr disc brake plate	1
12	125T-B-010300	Driver	1
13	125T-B-020300	Speedometer cable	1
14	GB6177-86	Flange Nut M12	1

14. REAR WHEEL




N.	CODE	DESCRIPTION	QTY.
1	125T-B-010203	Vacual tire 110/90-12	1
2	125T-B-010202	Valve cock	1
3	125T-B-040200	Rear rim MT3.5X12	1
4	125T-B-040402	Rr disc brake plate	1
5	125T-B-040403	Inner hes bolt M8X25	3
6	125T-B-040300	Connecting board	1
7	125T-B-040002	Rr wheel bush	1
8	GB6187-86	Nut flange locked M16X1.5	1
9	GB5787-86	Blot flange M8X25	1
10	GB5787-86	Blot flange M8X30	2

15. GUIDE SHELL SET OF INSTRUMENT

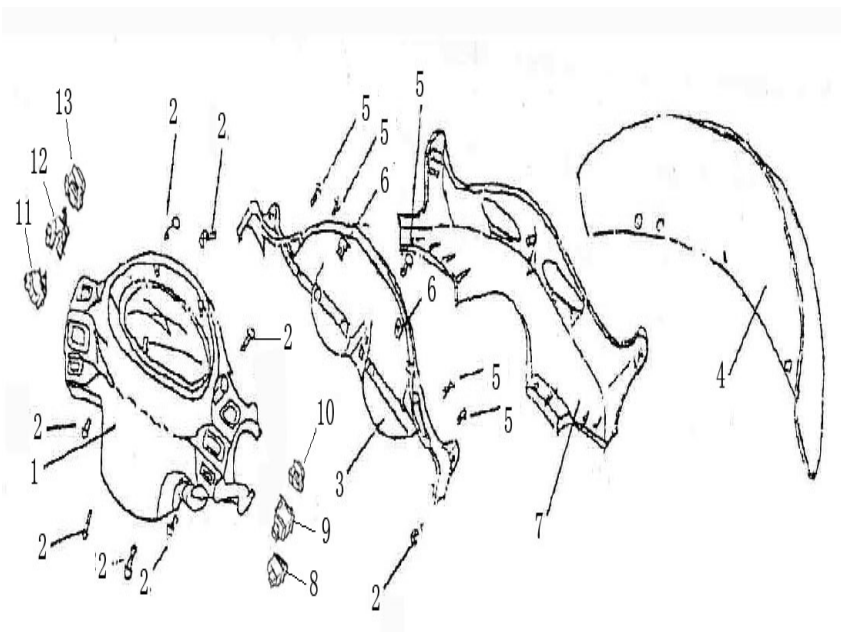


N.	CODE	DESCRIPTION	QTY.
1	125T-B-020201	Speedometer cover	1
2	GB845-85	Screw tapping ST4.8X16	8
3	125T-B-020209	Fr cover of instrument guide shell	1
4	125T-B-020211	Windshield	1
5	GB9074.14-88	Screw with washer M6X16	5
6	ZBT31084-87	Nut spring ST4.2	2
7	125T-B-020210	Windshield	1
8	125T-B-020203	Starter switch	1
9	125T-B-020204	Headlight switch	1
10	125T-B-020205	Fire-out switch	1
11	125T-B-020206	Horn switch	1
12	125T-B-020207	Direction indicator switch	1
13	125T-B-020208	High / dipped beam switch	1

16. STEERING HANDLE

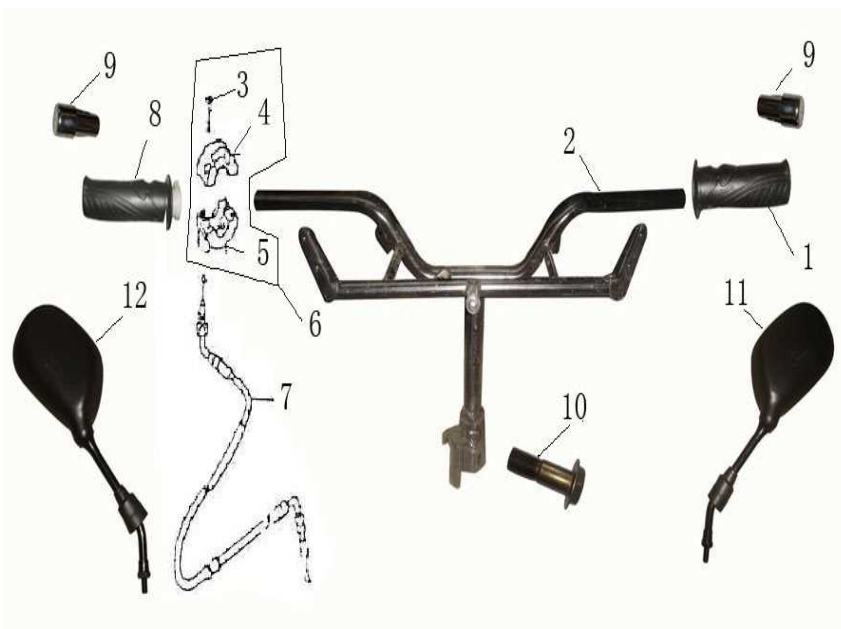


N.	CODE	DESCRIPTION	QTY.
1	125T-B-020101	L handle cover	1
2	125T-B-020102	Steering handle	1
3	125T-B-020103.1	Plus pan screw M5X22	2
4	125T-B-020103.2	Throttle cable up cover	1
5	125T-B-020103.3	Throttle cable down cover	1
6	125T-B-020103	fixing seat, throttle	1
7	125T-B-020400	Throttle cable	1
8	125T-B-020104	R handle cover	1
9	125T-B-020105	R and L handle cover balance block	2
10	GB578-86	Bolt M12X35	1
11	125T-B-001001	L rearview mirror	1
12	125T-B-001002	R rearview mirror	1

17. FRONT BRAKE DISC ASSEMBLY

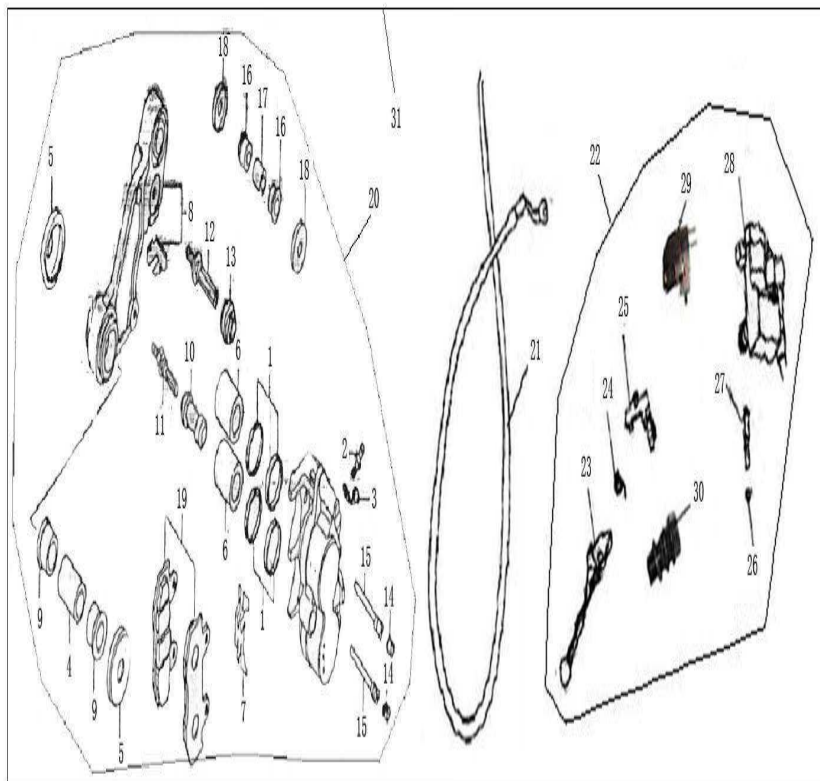

N.	CODE	DESCRIPTION	QTY.
1	125T-B-010401.1	Dustproof set piece	2
2	125T-B-010401.2	Expand oil bolt	1
3	125T-B-010401.3	Expand oil bolt cover	1
4	125T-B-010401.4	Front trig axis	1
5	125T-B-010401.5	Dustproof airproof circle	2
6	125T-B-010401.6	Oil cock pin	2
7	125T-B-010401.7	Diaplasis spring	1
8	125T-B-010401.8	fFont trig subsidiary oil cock splint	1
9	125T-B-010401.9	Front trig	2
10	125T-B-010401.10	Bolt pin bush	1
11	125T-B-010401.11	Bolt pin	1
12	125T-B-010401.12	Bolt pin A	1
13	125T-B-010401.13	Bolt pin glue circle	1
14	125T-B-010401.14	Orientation bolt pin stopper	2
15	125T-B-010401.15	Orientation bolt pin	2
16	125T-B-010401.16	Wrest connect pole bush	2
17	125T-B-010401.17	Wrest connect pole separate bush	1
18	125T-B-010401.18	Dustproof airproof circle	2
19	125T-B-010401.19	Front trig disc brake piece	1
20	125T-B-010401	Front trig low pump	1
21	125T-B-010402	Oil pipe	1
22	125T-B-010403	Fr disc brake pump	1
23	125T-B-010403.1	Grip comp handle R	1
24	125T-B-010403.2	Returning spring	1
25	125T-B-010403.3	Connecting socket	1
26	125T-B-010403.4	Nut M5	1
27	125T-B-010403.5	Bolt comp handle R	1
28	125T-B-010403.6	Oil cylinder ,Fr brake comp	1
29	125T-B-010403.7	Switch, front stop	1
30	125T-B-010403.8	Bolt,oil inlet	2
31	125T-B-010400	Fr disc plate	1

18. REAR BRAKE DISC ASSEMBLY

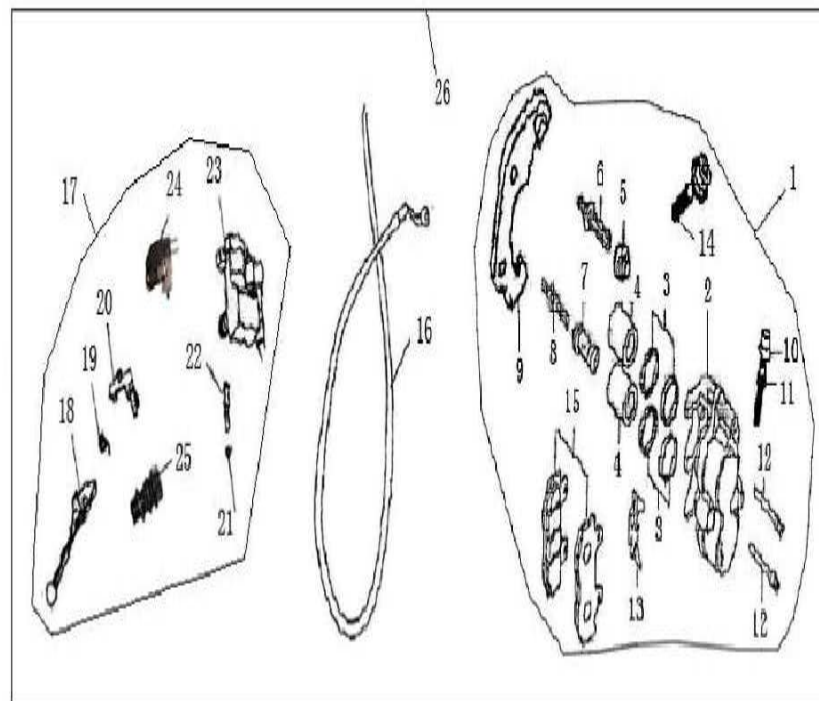


N.	CODE	DESCRIPTION	QTY.
1	125T-B-040401.1	Rr disc brake pump	1
2	125T-B-040401.1-1	Oil cylinder	1
3	125T-B-040401.1-2	Dustproof set piece	2
4	125T-B-040401.1-3	Oil crock pin	2
5	125T-B-040401.1-4	Bolt pin glue circle	1
6	125T-B-040401.1-5	Bolt pin A	1
7	125T-B-040401.1-6	Bolt pin bush	1
8	125T-B-040401.1-7	Bolt pin	1
9	125T-B-040401.1-8	Disc brake pump decorate board	1
10	125T-B-040401.1-9	Cover	1
11	125T-B-040401.1-10	Bolt of exhaust	1
12	125T-B-040401.1-11	Orientation bolt pin	2
13	125T-B-040401.1-12	Diaplasis spring	1
14	125T-B-040401.1-13	Bolt,oil inlet	1
15	125T-B-040401.1-14	Rear trig disc brake piece	1
16	125T-B-040401.2	Oil pipe	1
17	125T-B-040401.3	Rr disc brake pump	1
18	125T-B-040401.3-1	Grip comp handle L	1
19	125T-B-040401.3-2	Returning spring	1
20	125T-B-040401.3-3	Connecting socket	1
21	125T-B-040401.3-4	Nut M5	1
22	125T-B-040401.3-5	Bolt comp handle L	1
23	125T-B-040401.3-6	Oil cylinder ,Rr brake comp	1
24	125T-B-040401.3-7	Switch, rear stop	1
25	125T-B-040401.3-8	Bolt,oil inlet	2
26	125T-B-040401	Rr disc brake pump	1

19. ENGINE



N.	CODE	DESCRIPTION	QTY.
1	125T-B-040100	Engine	1
2	125T-B-040700	Carburetor	1
3	125T-B-040003	Aerate pipe groupware	1
4	125T-B-040801	Air cleaner	1
5	125T-B-040801.1	Sponge in air filter	1
6	125T-B-040802	Air cleaner holder, air pipe	2
7	125T-B-040900	Twice burning unilateralism valve	1


20. FEAR CUSHION

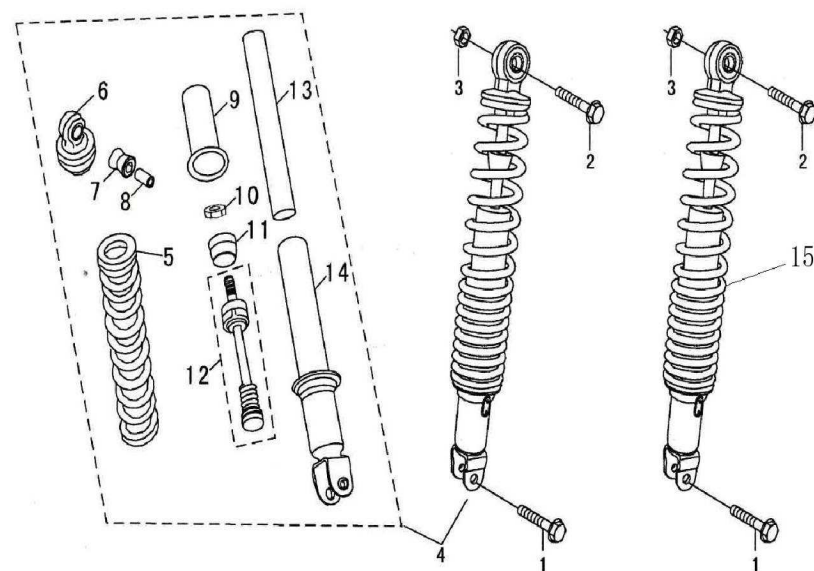

N.	CODE	DESCRIPTION	QTY.
1	GB5787-86	Bolt flange M10X1.25X40	2
2	GB5787-86	Bolt flange M8X30	2
3	GB6170-86	Nut M10	2
4	125T-B-040601	L rear absorber	1
5	125T-B-040601.1	Absorber spring	1
6	125T-B-040601.2	Up flying ring	1
7	125T-B-040601.3	Rubber bush	1
8	125T-B-040601.4	Bush	1
9	125T-B-040601.5	Protect bush	1
10	125T-B-040601.6	Big nut M10	1
11	125T-B-040601.7	Cushion block	1
12	125T-B-040601.8	Piston staff groupware	1
13	125T-B-040601.9	Work crock	1
14	125T-B-040601.10	Oil crock	1
15	125T-B-040602	R rear absorber	1

21. SPEEDOMETER

N.	CODE	DESCRIPTION	QTY.
1	125T-B-020202	Speedometer assembly	1
2	GB845-85	Nail ST4.2X16	3
3	125T-B-020202.1	Speedometer dial	1
4	125T-B-020202.2	Speedometer groupware	1
5	125T-B-020202.3	Speedometer inner cover	1
6	GB845-85	Nail ST3.8X16	3
7	125T-B-020202.4	Speedometer cover	1

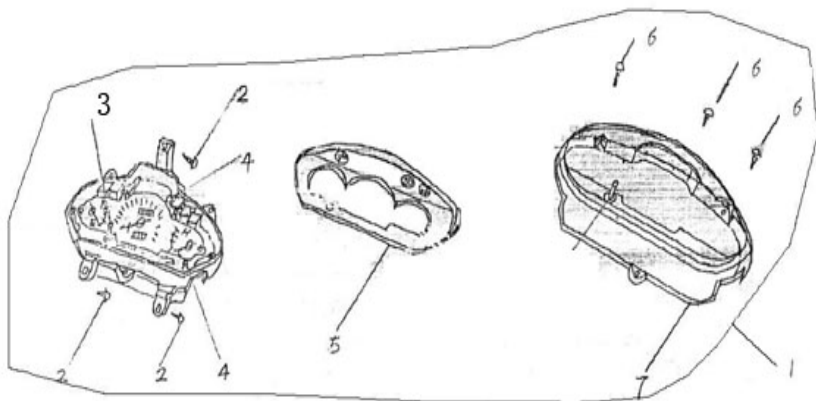

22. FRONT FORK

N.	CODE	DESCRIPTION	QTY.
1	125T-B-010101	Stem comp handle	1
2	125T-B-010102	Fr cushion Assy,L	1
3	125T-B-010103	Fr cushion Assy,R	1
4	GB70.1-200	Flange bolt M8X40	4
5	GB93-87	Spring washer φ8	4
6	125T-B-010003	Rubber ring	1
7	125T-B-010004	Disc brake pump vitta thread nip(□)	1
8	125T-B-010005	Disc brake pump vitta thread nip(□)	1
9	GB5787-86	Flange bolt M6X12	6
10	GB5787-86	Flange bolt M10X30	2
11	125T-B-010006	Fr fender	1
12	125T-B-000001	Up bearing groupware	1
13	125T-B-000002	Down bearing groupware	1
14	125T-B-000003.1	Locked nut(I)	1
15	125T-B-000003.2	Locked nut(II)	1




23. MUFFLER




N.	CODE	DESCRIPTION	QTY.
1	125T-B-040501	Muffler	1
1	125T-B-040501A	Muffler (With catalyst)	1
2	125T-B-040502	Protecting plate(big)	1
3	125T-B-040503	Vent decorate cover	1
4	125T-B-040504	Protecting plate(small)	2
5	GB5787-86	Bolt flange M6X10	9
6	GB93-87	Spring washer 6	9
7	125T-B-040500	Muffler assy	1
8	125T-B-040001	Asbestos Washer	1
9	GB823-86	Cap nut M6	2
10	GB5787-86	Bolt flange M8X110	1
11	GB5787-87	Bolt flange M8X35	1

24. FRAME

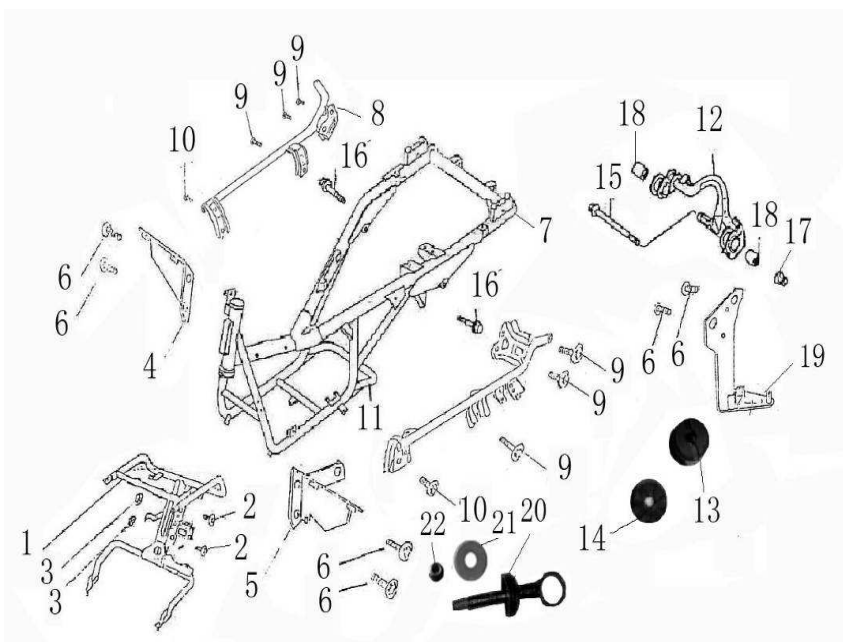


N.	CODE	DESCRIPTION	QTY.
1	125T-B-030200	Horn bracket	1
2	GB5787-86	Bolt flange M8X40	2
3	GB6187-86	Nut flange M8	2
4	125T-B-030702	R foot	1
5	125T-B-030701	L foot	1
6	GB5787-86	Bolt flange M6X16	4
7	125T-B-030801	L foot bracket	1
8	125T-B-030802	R foot bracket	1
9	GB5787-86	Bolt flange M6X12	4
10	GB5787-86	Bolt flange M8X16	6
11	125T-B-030100	Frame	1
12	125T-B-030601	Hanger	1
13	125T-B-030602	Hanger rubber(big)	1
14	125T-B-030603	Hanger rubber(small)	1
15	125T-B-000004	Condole frame axes	1
16	GB5787-86	Bolt flange M10X1.25X55	2
17	GB6187-86	Nut flange locked M10X1.25	1
18	125T-B-030605	Hanger gasdet	2
19	125T-B-030005	bracket, relay starter	1
20	125T-B-030604	Ear	1
21	GB97.1-85	Washer Φ 10X28	1
22	GB6187-86	Nut flange locked M10	1

25. STAND

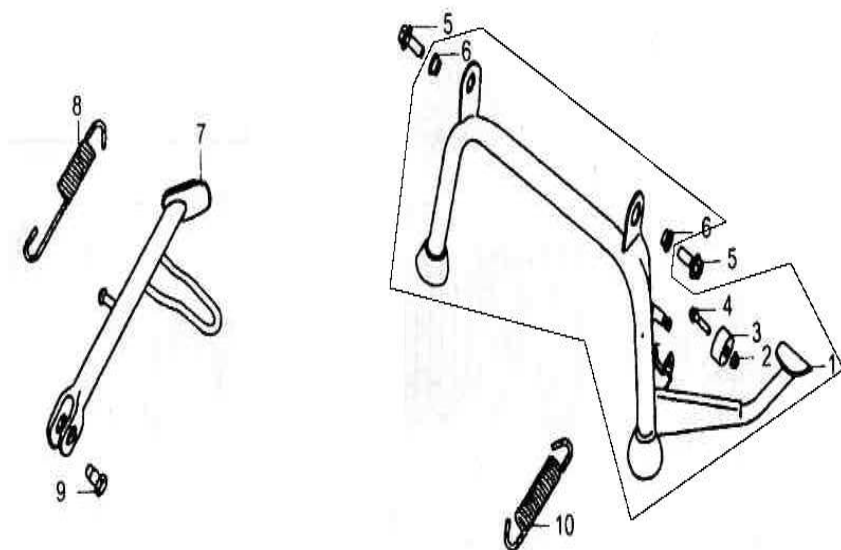

N.	CODE	DESCRIPTION	QTY.
1	125T-B-030501	Main stand	1
2	GB6187-86	Nut M6	1
3	125T-B-030502	Rubber, main stand	1
4	GB5787-86	Bolt flange M6X25	1
5	GB5787-86	Bolt flange M10X25	2
6	125T-B-030503	Big support bush	2
7	125T-B-030401	Side comp stand	1
8	125T-B-030002	Spring, side stand	1
9	125T-B-030402	Bolt comp side stand	1
10	125T-B-030003	Spring, main stand	1

26. OPTIONS

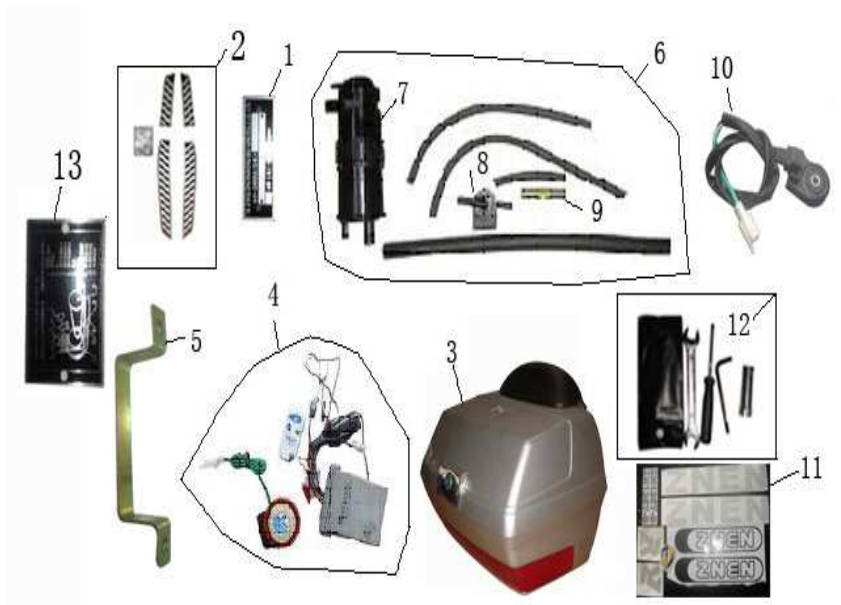

N.	CODE	DESCRIPTION	QTY.
1	125T-B-090040	Aluminium plate	1
2	125T-B-090100	Foot board skin(aluminium)	1
3	125T-B-090060	Trunk	1
4	125T-B-090060	Alarm	1
5	125T-B-090070	Alarm press board	1
6	125T-B-090090	Carbon tin groupware	1
7	125T-B-090090.1	Single direction valve	1
8	125T-B-090090.2	Straight copper connection	1
9	125T-B-090090.3	Carbon tin	1
10	125T-B-090080	Kill switch	1
11	125T-B-090030	Sticker	1
12	125T-B-090020	Tools with motorcycle	1
13	125T-B-090050	Antitamper plate	1